

# AIR DRIVE OWNER'S MANUAL



## Superior Mixing Performance

### QUICK START

- 01 Connect to the Mixer
- 02 Install into Container
- 03 Attach Compressed Air
- 04 Open Air Valve Slowly

1/4" AIR QUICK CONNECTOR

AIR CONTROL VALVE

INLET AIR FILTER


NON-SPARKING MUFFLERS

AIR MOTOR

GEAR BOX

1-1/2 NPT NOSE ADAPTER

7/16" HEX RECEIVER

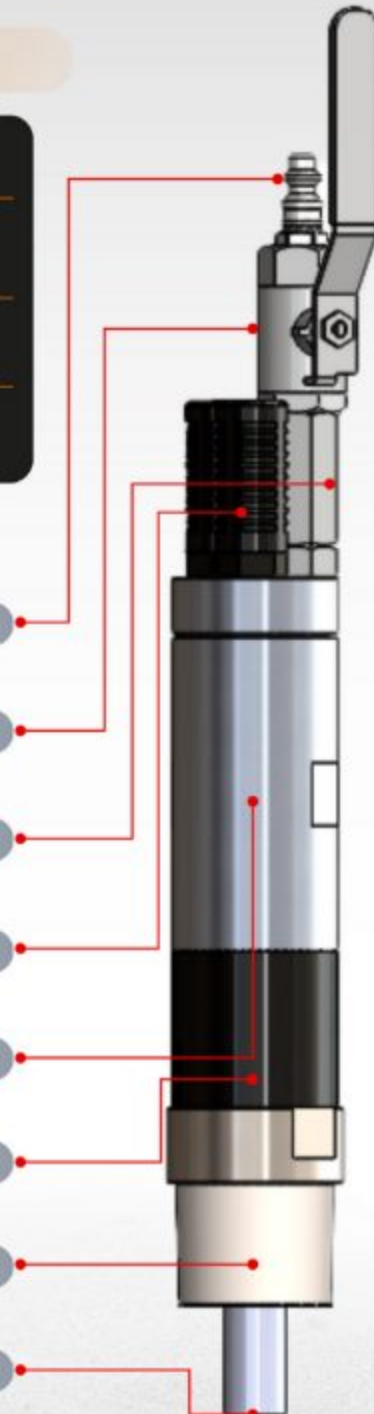

Optimum performance of the Even Mix<sup>®</sup> Air Drive is achieved when it is supplied with clean air regulated between 40 PSI to 90 PSI. Pressure should not exceed 140 PSI.

The Even Mix<sup>®</sup> Air Drive requires a hose diameter of 3/8" for lengths up to 25' and 1/2" for lengths up to 50' and has air consumption of 13 SCFM (Standard Cubic Feet per Minute).

The tool should be supplied air through a FRL (Filter, Regulator, & Lubricator) that has a flow rating capable of supplying the air motor with sufficient air pressure and volume so that the desired torque and RPM can be achieved.

To extend the Air Motor life, a good quality oil specifically for use in pneumatic tools, should be used. Lubricating oils that contain cleaning or anti-gumming agents should not be used. These additives may cause malfunction.



### PREVENTIVE MAINTENANCE

Lubricate the air motor with a drop of Air Motor Oil directly into the incoming air motor port once a week with pneumatic tool oil.



## SLOW OR REDUCED PERFORMANCE

**Remove** the Incoming Air Filter (#9520-90002) and the **Exhaust** (#9520-91001) to inspect for clogging.

Often material from the air lines becomes caught in the air filters which requires them to be replaced.

They are effectively doing their job at catching particulate before it enters and fouls the air rotor.

**Note:** Please call us for replacement parts.

## OUTPUT STOPS

First **ensure that the air motor is receiving air** as described above by clearing the air filter and exhaust.

Try to free the output by turning it back and forth gently with a wrench. Occasionally debris can become lodged in the air motor and you can break it free.

If you need to separate the air motor and the gear box to inspect them, remove the Gear Housing (#3200-40650) from the Air Motor Housing (#5223-02650).

It is a Right-Hand Thread. Do not remove the End Housing (#1215-06500).

See if the gear box is turning free and if the air motor is turning free. You can isolate the issue from that point.

When joining the Gear Housing (#3200-40650) with the Air Motor Housing (#5223-02650) ensure that the hex output of the Rotor (#1110-00025) properly mates with the Pinion Gear (#3100-40193) before tightening.



## **AIR DRIVE – LIMITED WARRANTY**

Even Mix<sup>®</sup> warrants the Even Mix<sup>®</sup> Air Drive against defects in material and workmanship for 1 (one) Year from the original purchase date of the air drive. Without charge to the original purchaser, Even Mix<sup>®</sup>, at its option, will repair or replace any air drive or component part if it is found to be defective or not in accordance with Even Mix<sup>®</sup> Engineering specifications in effect at the time of manufacture and said air drive or component part is in active commercial production by Even Mix<sup>®</sup>. Without charge to the original purchaser, Even Mix<sup>®</sup> will also, at its option, repair or replace any air drive or component part in the event of a failure due to wear encountered in normal operation under typical specified conditions where typical maintenance procedures have been observed if such failure occurs within 1 (one) year of the original purchase date of the mixer. The air drive is to be returned to Even Mix<sup>®</sup>'s factory with shipping charges prepaid.

This warranty will not apply to any air drive which has been misused, misapplied, modified or has been subjected to negligence or has been damaged by accidental misuse or other damage by accidental occurrences; or in which parts not manufactured by or specified by Even Mix<sup>®</sup> have been used for repair; or which shall have been repaired or altered by other than Even Mix<sup>®</sup> authorized personnel in such a manner, as determined by Even Mix<sup>®</sup>, that the function of the air drive has been affected.

**THIS WARRANTY CONSTITUTES THE ENTIRETY OF THE OBLIGATION OF Even Mix<sup>®</sup> RELATIVE TO THE SALE AND USE OF SAID PRODUCTS AND ITS MAXIMUM LIABILITY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT. IN NO EVENT WILL Even Mix<sup>®</sup> BE LIABLE FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES ARISING FROM THE USE OR SALE OF SUCH PRODUCT.**